


GRP Products

CHELTENHAM FITTING GUIDE

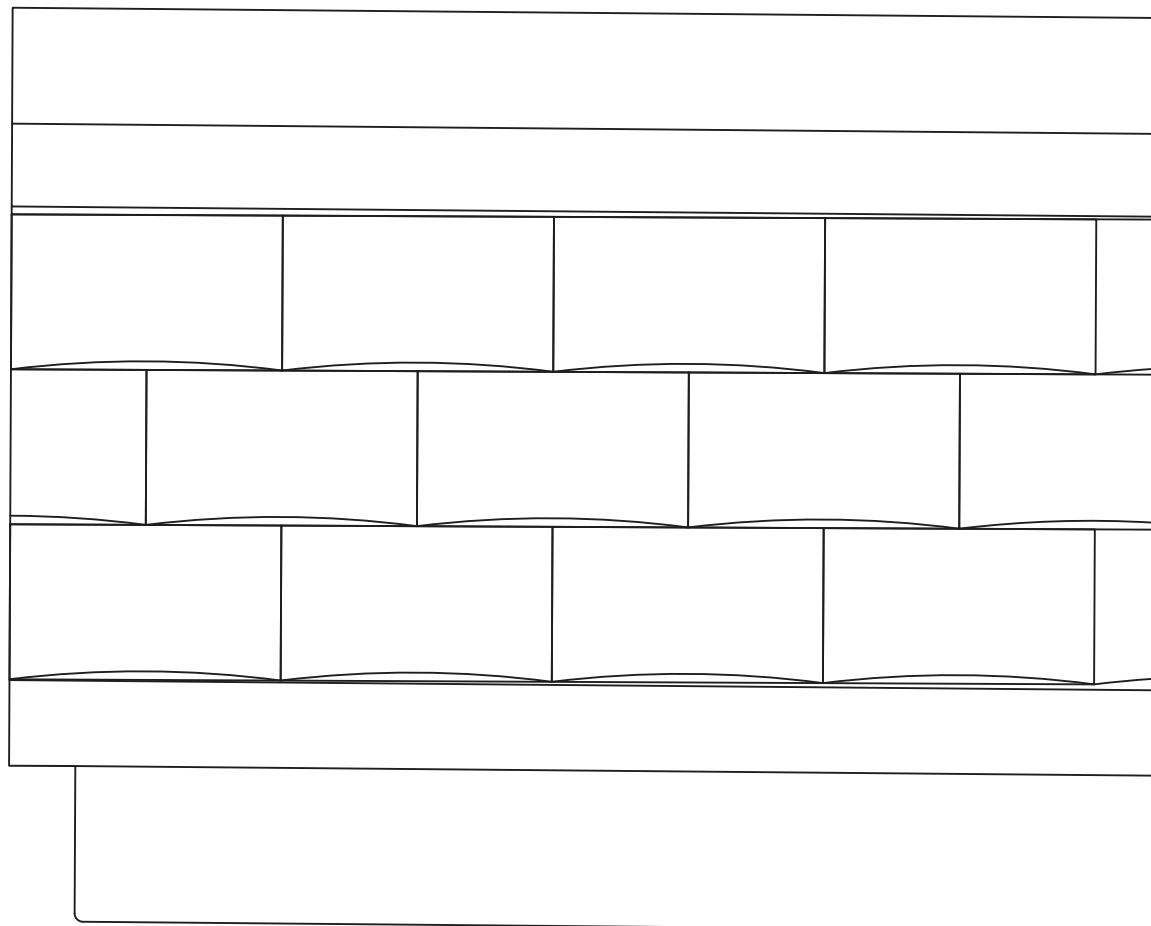

GRP Products Ltd
Units 1&2 Cawdor Mill
Cawdor Street
Bolton
BL4 7JA
Telephone: 01204 657 775
Email: purchasing@grp-products.co.uk

IMPORTANT NOTE

Fitting guide is suitable for solid brickwork & 7KN Blockwork
(Any other substrate may need alternative fixings)

1: Wall Brackets

For Cheltenham Canopy Types

Positioning & Fixing Brackets

Recommended Fixings:

7.5mm x 100mm Concrete Screws
5mm x 50mm Wood Screws
Hinged Screw Caps
Rawlplugs

Required Tools:

Various Drill Bit Sizes
Silicone Sealant



- 1.1** Determine the canopy height: this can be level with the door head, above the door head, etc. The width is based on the canopy dimensions.



- 1.2** Pre-drill the brackets, then clearly mark the location of the first bracket onto the wall to prepare for drilling.



- 1.3** Remove the bracket and drill the indicated holes using a 6mm drill bit.



- 1.4** Use 100mm concrete fixings to securely attach the first bracket, and finish with cap covers.



- 1.5** Align the second bracket with the first. Drill and secure it in place as previously completed.



- 1.6** Ensure that all fixings are completely tightened in preparation for the canopy installation.

2: Fixing The Canopy

For Cheltenham Canopy Types

Positioning & Fixing The Canopy Base



2.1 Remove coloured roof from the canopy base.



2.2 Place the canopy base only onto the gallows, ensuring the canopy is level and centralised on the gallows.



2.3 Drill a pilot hole underneath the gallows and into the canopy base. Repeat this on both sides.



2.4 Fix in place with 5×50mm wood screws using the provided screw caps.



2.5 Carefully position and slide the roof section into place on the canopy base.




2.6 Mark and drill evenly through the roof upstand. Ideally targeting the centers of the bricks.

3: Fixing The Roof

For Cheltenham Canopy Types

Positioning & Fixing The Roof

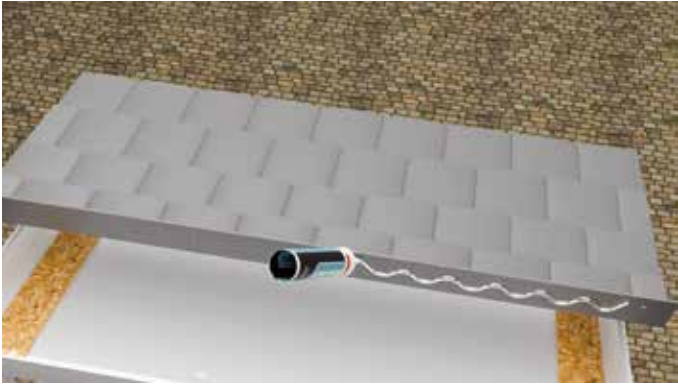

2.7 To prevent water migration, apply clear silicone sealant to the reverse side of the upstand prior to fixing.



2.8 Secure the roof through the drilled holes in the brick, using wall plugs if necessary, and the provided screw caps.



2.9 Apply a bead of silicone sealant along the top of the roof upstand. This is essential, as neglecting it can lead to water ingress inside the base.

Cleaning & Maintenance

Regular cleaning & maintenance is essential to maintain a canopies gloss and usability for a long period. This should be carried out every 4 – 6 months, however canopies exposed to harsher environments, such as maritime or industrial environments, may need to be cleaned more often.

Cleaning is done with a soft cloth and warm soapy water, this is suitable for light dirt, fingerprints, and any airborne residue.

AVOID any type of abrasive or aggressive cleaning, such as bleach, alcohol, scouring pads, steel wool or wire brushes to clean any part of the canopy.